



# NESPRESSO®

## ESSENZA AUTOMATIC




**D100**

**Instruction Manual**



Please read this Instruction Manual and the safety instructions before operating the appliance!

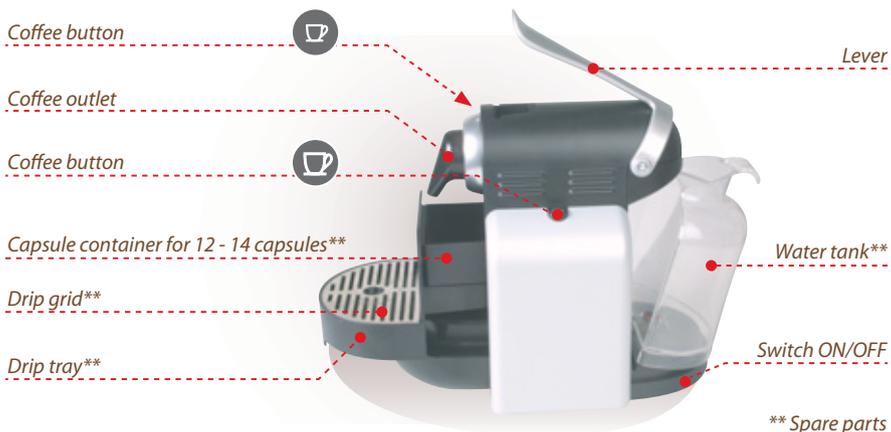

# 1 First use or after a longer period of non-use



Remove plastic film



Fill water tank



Place a container



Plug into mains + switch ON



Heating up



Ready



Rinse: let water run through 6x

No water ☹️ see: **8b**

# 2 Daily: before the 1st coffee



fresh water



Switch ON



Heating up



Ready

# 3



# Espresso



# Lungo

## Preparation



Preheat cup:



1 cup of water



Insert capsule



Eject capsule (drops into capsule container)



Flow speed depends on coffee variety



## Programming the fill up level



Insert capsule



Press and hold button for at least 3 seconds, release at desired level



## Resetting the programmed large and small coffee flows to factory settings



Switch OFF



Press and hold big cup button




Switch ON

# 4

## Daily: After the last coffee



Switch off

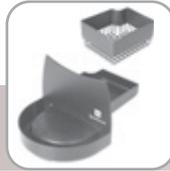

Empty capsule container + drip tray



Rinse and empty water tank

# 5

## Clean: When necessary



~~abrasive~~

~~solvent container~~

 
~~dishwasher~~



Damped cloth, cleaning agent mild

# 6

## Empty system: After long period of non-use, for frost protection and after repair



Switch off and remove water tank



Press small cup button & switch on simultaneously



Buttons blink alternatively



1. Open  
2. push and hold for 3 secs.



Close



Switch off  
(machine blocks for 10 min and is ready to be transported)



# 7 Descaling



Carefully read safety instructions on decalcifier package.  
 Decalcifier is aggressive to surface of casing.  
 Vinegar: Danger of damage

Water hardness    Descalce after


fH	dH	↑		
36	20		300	
18	10		600	
0	0	1200		

## Preparation

a



Remove capsule

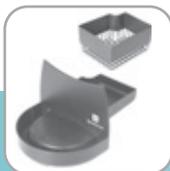

Empty capsule container + drip tray



Rinse machine, see 1



If leakage see:

8d

b



Fill with Nespresso descaler and 0.5 l water



Place a recipient



1. Lift lever, 2. insert filter, 3. close lever



## Descaling

Avoid using vinegar as it can damage your machine.

c



Press both buttons simultaneously for 3 seconds



Start

Let descaling solution run through twice

Stop



Refill water tank once more with descaling solution and repeat step

## Rinse

d



Remove filter



Empty, rinse and fill water tank with fresh water



Rinse machine, see 1



Exit: press both buttons simultaneously for 3 seconds



# 8 Troubleshooting

a



No light indicator



Check mains: plug, voltage, fuse. In case of problems call *Nespresso Club*

b

No coffee, no water

- Water tank empty -> fill water tank

- Venting



1. Open + 2. hold



Close

- Descalc, if necessary -> point 7

c

Coffee not hot enough



Preheat cup, descale if necessary

d

Lever cannot be closed completely



Empty capsule container / check that no capsule is blocked inside the capsule container

e

Irregular interval blinking



Send machine to repair or call *Nespresso Club*



## Specifications



..... 220 - 240 V, 50 Hz, max. 1260 W



..... max. 19 bar



..... ~ 3 kg



..... 1 l



..... 5 °C ... 45 °C



..... 16.6 cm 25.5 cm 29.1 cm



## Optional Accessory



*Nespresso* descaling kit

D100\_Z3\_01.06